

# 704 - DISHWASHER CLEANER

DISHWASHER CLEANER is special formulated for cleaning and maintenance of your dishwashing machine. The Dishwasher Cleaner efficiently dissolves grease and fat from piping inside the machine as well as any limescale build-up, and leaves the machine clean with a pleasant scent.

## Instructions

Empty the machine and clean the filter. Remove the seal from the top of the cap and place the bottle, still with the cap on, upside down in the cutlery basket in an empty machine. Close the machine and run a washing program at min. 65°C. Recommended to be used once per month depending on how often the machine is being used.

## Declaration

**Contains:** 15-30% Citric acid, <15% non-ionic surfactants, <5% amphoteric surfactants. Also contains: water, isopropyl alcohol, and perfume.

**WARNING:** Causes serious eye irritation. Keep out of the reach of children. Wash skin thoroughly after handling. Wear suitable eye protection.

**IF IN EYES:** Rinse cautiously with water for several minutes. Remove contact lenses, if present and easy to do. Continue rinsing. If eye irritation persists: get medical advice/attention.



## Conditioning

250ml (12 units/box) / 500ml (12 units/box)

If you have any questions, please contact our Technical Department on: +45 4817 6970